




SOMFY Garage Door Drive AXORN 65/85

Register hand transmitter to Garage Door

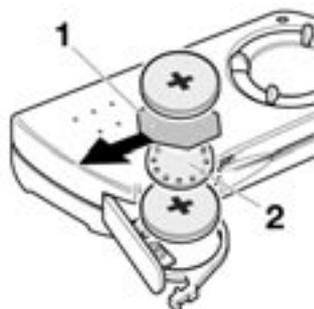


As a protection against discharge two 3 volt battery cells are separated by insulating paper (1). Remove paper on commissioning. Take care that the contact sheet (2) remains between the batteries.

Seven different handsets can be programmed. When an eighth is tried the drive light signals for 1 second instead of the usual flashing to indicate that the memory is full.

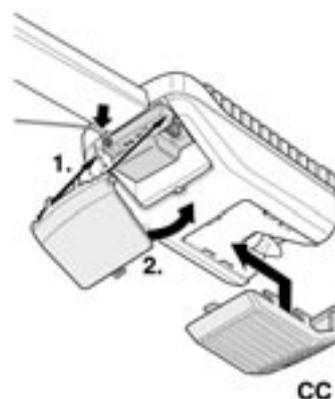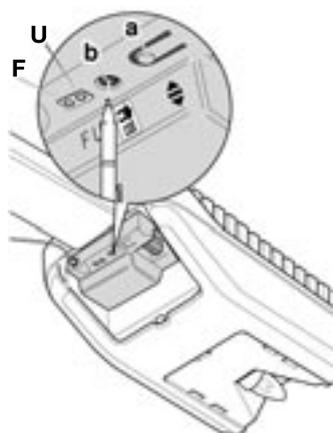

- Briefly press program key (ca 1 second) the drive light will flash (If the light is permanent the program key was pressed too long. In this case remove plug and re-connect it. Carry out another test run and register hand set)
- Press key on handset for at least 2 seconds. The drive light will go out and then flash again.
- Press key on handset once again. The drive light will go out and come on shortly afterwards - the registration process is complete. Lighting diode F in the electronic insert indicates that a signal is being received from the handset.
- Replace cover for electronic insert and drive lighting.

Test Recognition of Obstacle

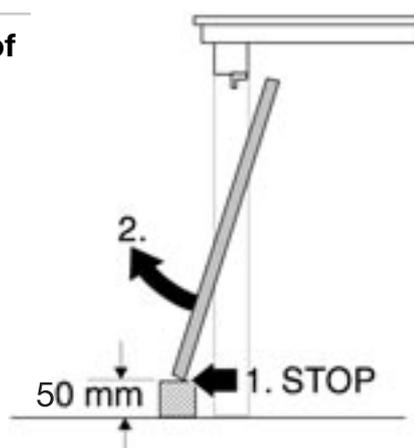

On commissioning and then monthly:

- Place a suitable object 50 mm high (block of wood) in the path of the door. Door close movement
- Door Drive Start

On reaching the obstacle the door stops, runs up to the upper mechanical end stop (reference point) and then back to the upper programmed end stop. Drive light flashes in 1 sec. intervals. When door drive re-starts it stops flashing. If not contact your authorised dealer.